




Membrane Filter Replacement

HW-RO-RO

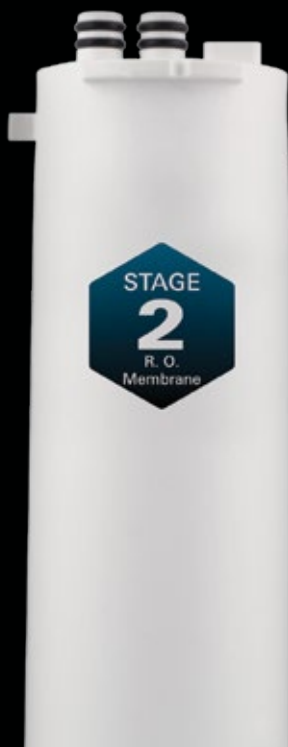

REPLACEMENT INSTRUCTIONS

FOR USE WITH HW-RO-B

INSTRUCTIONS

- 1 Turn off the cold water supply under the sink. Release the pressure from the system by turning on the filtration system faucet. Once there is no longer any water coming from the filtration system faucet, you will be ready to change the membrane.

NOTE – Have a towel handy to catch any excess water.

- 2 Disconnect the ¼" red hose from the drain port on membrane filter elbow by pushing down on the white collar while pulling plug with other hand. Remove and discard the flow restrictor. (Fig. A)

- 3 Remove the membrane cartridge from the system by rotating the sump to the left & pulling down. (Fig. B)

- 4 Discard the old membrane cartridge.

- 5 Remove the new membrane cartridge from the packaging & remove the protection cap from the head of the membrane.

- 6 Attach membrane cartridge to the system manifold by making sure all connection points are aligned, pushing the top of the sump up & into the system manifold & turn the sump towards the right. Ensure that the sump is fully attached and locked in. (Fig. C)


- 7 Insert the new flow restrictor into the red ¼" tubing. Push red tubing into the drain port elbow on membrane filter. (Fig. D)

IMPORTANT – Be sure red tube and elbow are inserted all the way.

- 8 Turn on the cold water supply. Purge the system by opening the designated faucet and letting water flow through system for 24 hours.

- 9 Once the system has been purged, shut off the faucet, allow 2 hours for pressure to build up in the system & check for leaks.

- 10 Your RO system is ready to use.

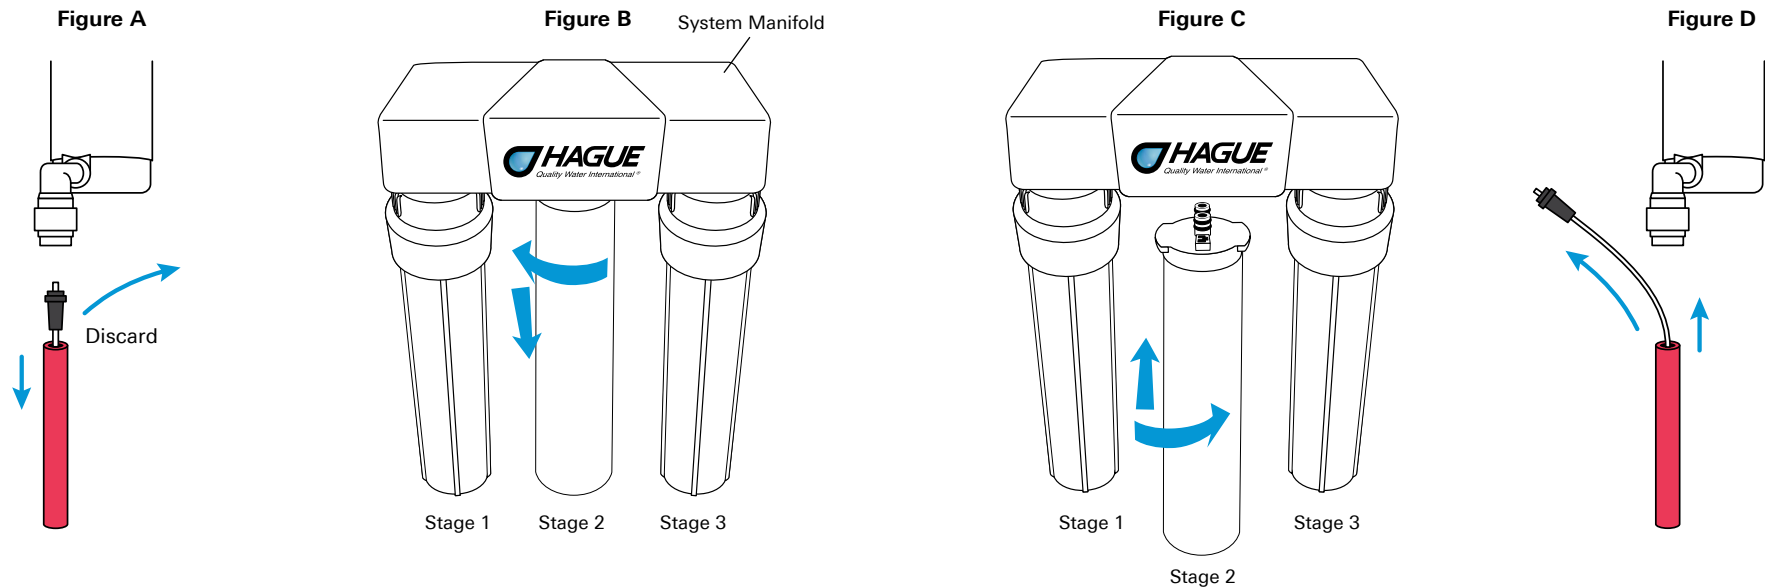

Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected waters that may contain filterable cysts.

- Rated capacity: 24 months depending on contaminant levels & usage.



4343 S. Hamilton Road | Groveport, OH 43125 | 614-836-2115